

Air conditioner

User manual

AC***TN*PEC

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this user manual carefully and retain it for future reference.



DB68-11191A-00

SAMSUNG

Contents

Safety Information	3
Safety Information	3
At a Glance	11
Indoor Unit Overview	11
Cleaning and Maintenance	12
Cleaning the Air Conditioner	12
Maintaining the Air Conditioner	15
Appendix	17
Troubleshooting	17
Operation Features	21
Product specification	22



***Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)***

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Safety Information

Before using your new air conditioner, please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance.

Because the following operating instructions cover various models, the characteristics of your air conditioner may differ slightly from those described in this manual. If you have any questions, call your nearest contact centre or find help and information online at www.samsung.com.

WARNING

Hazards or unsafe practices that may result in severe personal injury or death.

CAUTION

Hazards or unsafe practices that may result in minor personal injury or property damage.

-  Follow directions.
-  Do NOT attempt.
-  Make sure the machine is grounded to prevent electric shock.
-  Cut-off the power supply.
-  Do NOT disassemble.

FOR INSTALLATION

WARNING

-  **Use the power line with the power specifications of the product or higher and use the power line for this appliance only. In addition, do not use an extension line.**

- Extending the power line may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.
- If the voltage/frequency/rated current condition is different, it may cause fire.

Safety Information

The installation of this appliance must be performed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, explosion, problems with the product, or injury.

Install a switch and circuit breaker dedicated to the air conditioner.

- Failing to do so may result in electric shock or fire.

Fix the outdoor unit firmly so that the electric part of the outdoor unit is not exposed.

- Failing to do so may result in electric shock or fire.

 **Do not install this appliance near a heater, inflammable material. Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops). Do not install this appliance in a location where gas may leak.**

- This may result in electric shock or fire.

Never install the outdoor unit in a location such as on a high external wall where it could fall.

- If the outdoor unit falls, it may result in injury, death or property damage.

 **This appliance must be properly grounded. Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.**

- Failure to do so may result in electric shock, fire, an explosion, or other problems with the product.

CAUTION

Install your appliance on a level and hard floor that can support its weight.

- Failing to do so may result in abnormal vibrations, noise, or problems with the product.

Install the draining hose properly so that water is drained correctly.

- Failing to do so may result in water overflowing and property damage. Avoid adding drain to waste pipes as odours may arise in the future.

The product shall be stored in a room with no ignition sources (e.g. open flames, gas appliance, electric heater, etc.).

- Note that the refrigerant has no odour.

When installing the outdoor unit, make sure to connect the draining hose so that draining is performed correctly.

- The water generated during the heating operation by the outdoor unit may overflow and result in property damage. In particular, in winter, if a block of ice falls, it may result in injury, death or property damage.

Do not install the product in a place where thermo-hygrostat is needed (such as server room, machinery room, computer room, etc.)

- Those places do not provide guaranteed operation condition of the product therefore performance can be poor in these places.

FOR POWER SUPPLY

WARNING

When the circuit breaker is damaged, contact your nearest service centre.

Do not pull or excessively bend the power line. Do not twist or tie the power line. Do not hook the power line over a metal object, place a heavy object on the power line, insert the power line between objects, or push the power line into the space behind the appliance.

- This may result in electric shock or fire.

Safety Information

CAUTION

-  **When not using the air conditioner for a long period of time or during a thunder/lightning storm, cut the power at the circuit breaker.**
 - Failing to do so may result in electric shock or fire.

FOR USING

WARNING

-  **If the appliance is flooded, please contact your nearest service centre.**
 - Failing to do so may result in electric shock or fire.

If the appliance generates a strange noise, a burning smell or smoke, cut-off the power supply immediately and contact the nearest service center.

- Failing to do so may result in electric shock or fire.

In case of a malfunction, immediately stop operation of the air conditioner and disconnect the entire power system. Then consult the authorized service personnel.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power line. Do not touch the appliance or power line.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

To reinstall the air conditioner, please contact your nearest service centre.

- Failing to do so may result in problems with the product, water leakage, electric shock, or fire.
- A delivery service for the product is not provided. If you reinstall the product in another location, additional construction expenses and an installation fee will be charged.
- Especially, when you wish to install the product in an unusual location such as in an industrial area or near the seaside where it is exposed to the salt in the air, please contact your nearest service centre.

-  **Do not touch the circuit breaker with wet hands.**

- This may result in electric shock.

Do not turn the air conditioner off with the circuit breaker while it is operating.

- Turning the air conditioner off and then on again with the circuit breaker may cause a spark and result in electric shock or fire.

After unpacking the air conditioner, keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

Do not touch the front panel with your hands or fingers during the heating operation.

- This may result in electric shock or burns.

Do not insert your fingers or foreign substances into the outlet when the air conditioner is operating or the front panel is closing.

- Take special care that children do not injure themselves by inserting their fingers into the product.

Do not insert your fingers or foreign substances into the air inlet/outlet of the air conditioner.

- Take special care that children do not injure themselves by inserting their fingers into the product.

Do not strike or pull the air conditioner with excessive force.

- This may result in fire, injury, or problems with the product.

Do not place an object near the outdoor unit that allows children to climb onto the machine.

- This may result in children seriously injuring themselves.

Do not use this air conditioner for long periods of time in badly ventilated locations or near infirm people.

- Since this may be dangerous due to a lack of oxygen, open a window at least once an hour.

Do not use means to accelerate the defrost operation or to clean, other than those recommended by Samsung.

Do not pierce or burn.

Be aware that refrigerants may not contain an odour.

Safety Information

-  **If any foreign substance such as water has entered the appliance, cut-off the power supply and contact the nearest service center.**
 - Failing to do so may result in electric shock or fire.

-  **Do not attempt to repair, disassemble, or modify the appliance yourself.**
 - Do not use any fuse (such as copper, steel wire, etc.) other than the standard fuse.
 - Failing to do so may result in electric shock, fire, problems with the product, or injury.

CAUTION

-  **Do not place objects or devices under the indoor unit.**
 - Water dripping from the indoor unit may result in fire or property damage.

Check that the installation frame of the outdoor unit is not broken at least once a year.

- Failing to do so may result in injury, death or property damage.

Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

When the air conditioner does not operate properly for cooling or heating, there is a possibility of refrigerant leakage. If any leakage, stop operation, ventilate the room, and consult your dealer immediately for recharging refrigerant.

The refrigerant is not harmful. However, if it comes in contact with fire, it may generate harmful gases and there is risk of fire.

During transportation of the indoor unit, the pipe lines shall be covered with brackets for protection. Do not move the product with holding the pipe lines.

- It may cause gas leakage.

-  **Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.**
 - This may result in electric shock, fire, problems with the product, or

injury.

Do not operate the appliance with wet hands.

- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not drink the water from the air conditioner.

- The water may be harmful to humans.

Do not apply a strong impact to the remote controller and do not disassemble the remote controller.

Do not touch the pipes connected with the product.

- This may result in burns or injury.

Do not cut or burn the refrigerant container or pipings.

Do not point the air direction to the fireplace or heater.

Do not use this air conditioner to preserve precision equipment, food, animals, plants or cosmetics, or for any other unusual purposes.

- This may result in property damage.

Avoid directly exposing humans, animals or plants from the air flow from the air conditioner for long periods of time.

- This may result in harm to humans, animals or plants.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

FOR CLEANING



WARNING

Safety Information

 **Do not clean the appliance by spraying water directly onto it. Do not use benzene, thinner, alcohol or acetone to clean the appliance.**

- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, cut-off the power supply and wait until the fan stops.

- Failing to do so may result in electric shock or fire.

CAUTION

 **Take care when cleaning the surface of the heat exchanger of the outdoor unit since it has sharp edges.**

- To avoid cutting your fingers, wear thick cotton gloves when cleaning it.
- This should be done by a qualified technician please contact your installer or service centre.

 
 **Do not clean the inside of the air conditioner by yourself.**

- For cleaning inside the appliance, contact your nearest service centre.
- When cleaning the internal filter, refer to the descriptions in the 'Cleaning and Maintaining' section.
- Failure to do so may result in damage, electric shock or fire.
- Make sure to prevent any injury from sharp edges of the surface when handling the heat exchanger.


Indoor Unit Overview

Congratulations on the purchase of the air conditioner. We hope you enjoy the features of your air conditioner and stay cool or warm with optimal efficiency. Please read the user manual to get started and to make the best use of the air conditioner.


AC012/018/024/030/036/042TNMPEC

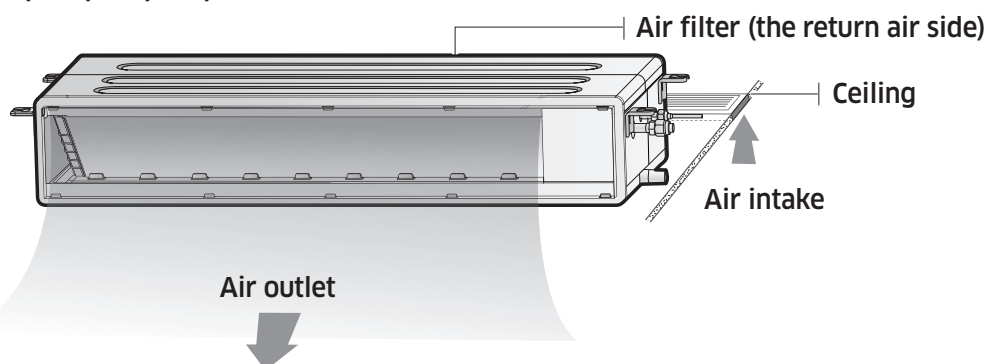

AC054TNMPEC

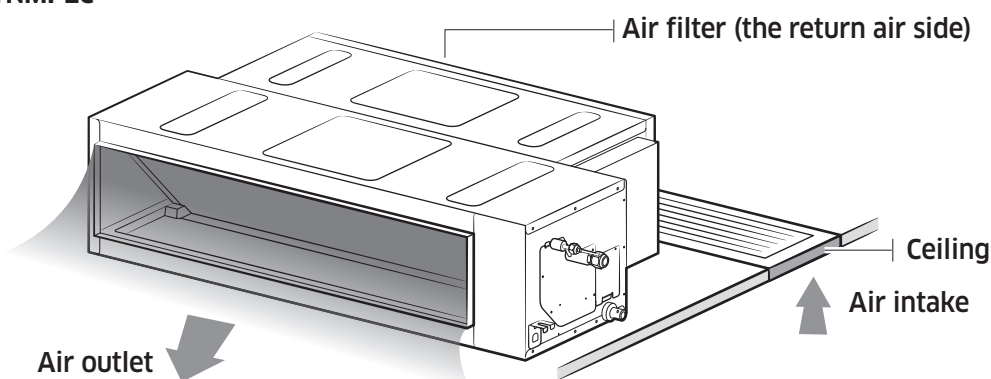 

AC060TNHPEC

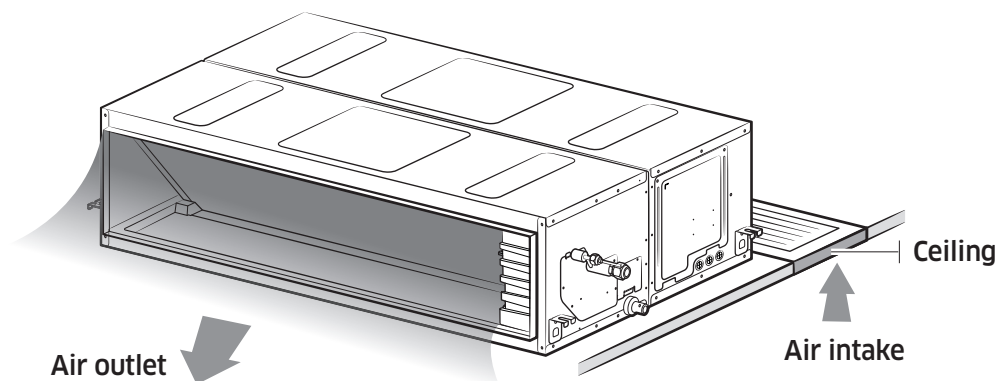 

NOTE

- Your air conditioner and display may look slightly different from the illustration shown above depending on your model.

Cleaning the Air Conditioner

Cleaning the air filter

 
For the best performance from your air conditioner, clean it periodically.

Before cleaning the air filter, be sure to turn off the auxiliary power switch. Air filter captures large particles from the air.


The filter is cleaned with a vacuum or by hand washing.

AC012/018/024/030/036/042TNMPEC

1. Grab the handle on the top of the filter, then go down and remove the filter from the indoor unit.

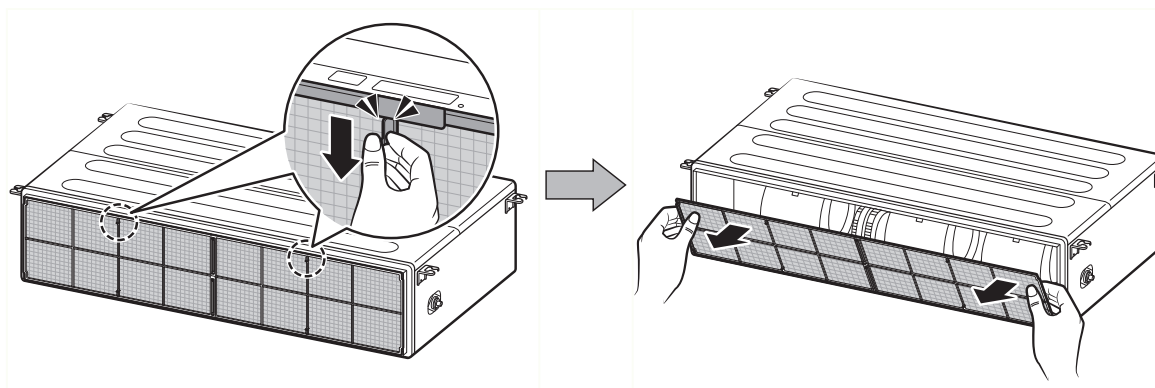


 2. Clean the Air filter with a vacuum cleaner or soft brush. If dust is too heavy, then rinse it with running water and dry it in a ventilated area.

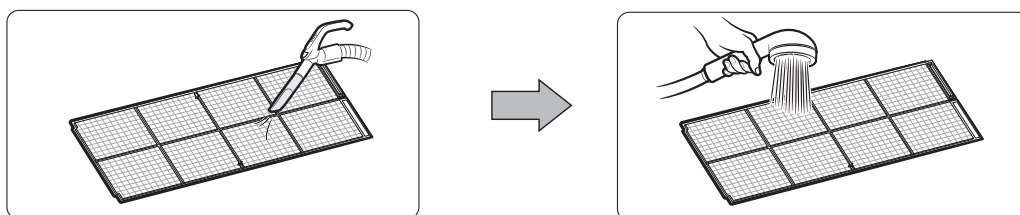

- For best conditions, repeat every two weeks.
- If the Air filter dries in a confined (or humid) area, odors may generate. If it occurs, re-clean and dry it in a ventilated area.

 3. Insert the Air filter back in its original position.

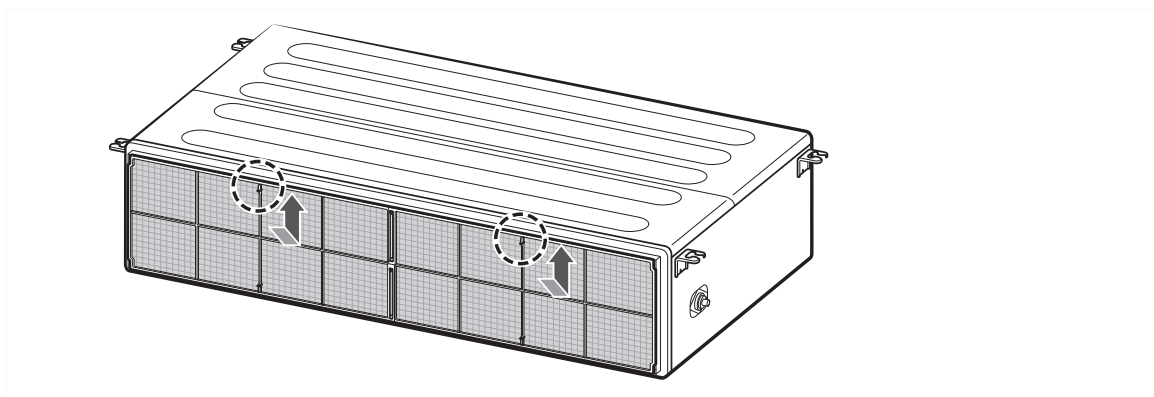


NOTE

- The illustration shown above may differ from yours depending on your model.
- After cleaning the filter, press the **Filter Reset** button on the remote control for 2 seconds to reset the filter schedule. Filter sign indicator will be on for cleaning time.


AC054TNMPEC

 1. Lower the handle at the top of the filter downwards and remove the filter from the indoor unit.

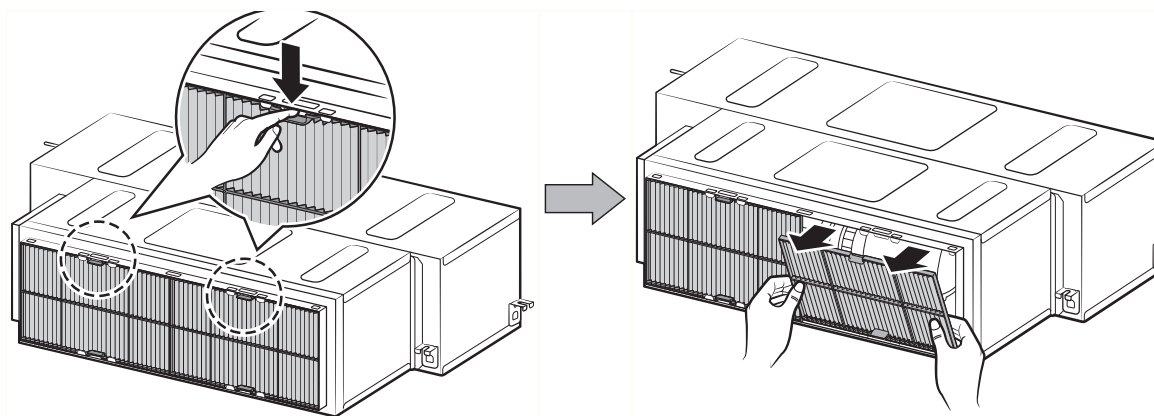


2. Clean the Air filter with a vacuum cleaner or soft brush. If dust is too heavy, then rinse it with running water and dry it in a ventilated area.

 Cleaning the Air Conditioner

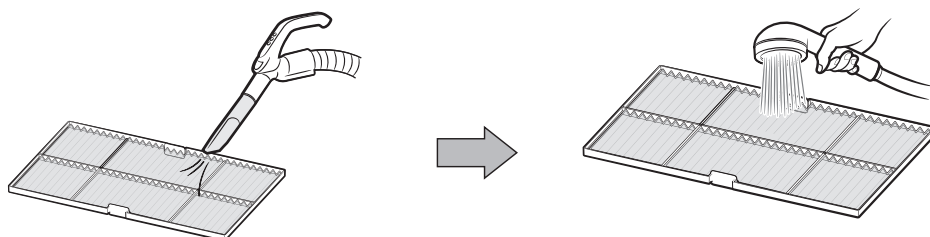

- For best conditions, repeat every two weeks.
- If the Air filter dries in a confined (or humid) area, odors may generate. If it occurs, re-clean and dry it in a ventilated area.

 3. Insert the Air filter back in its original position.

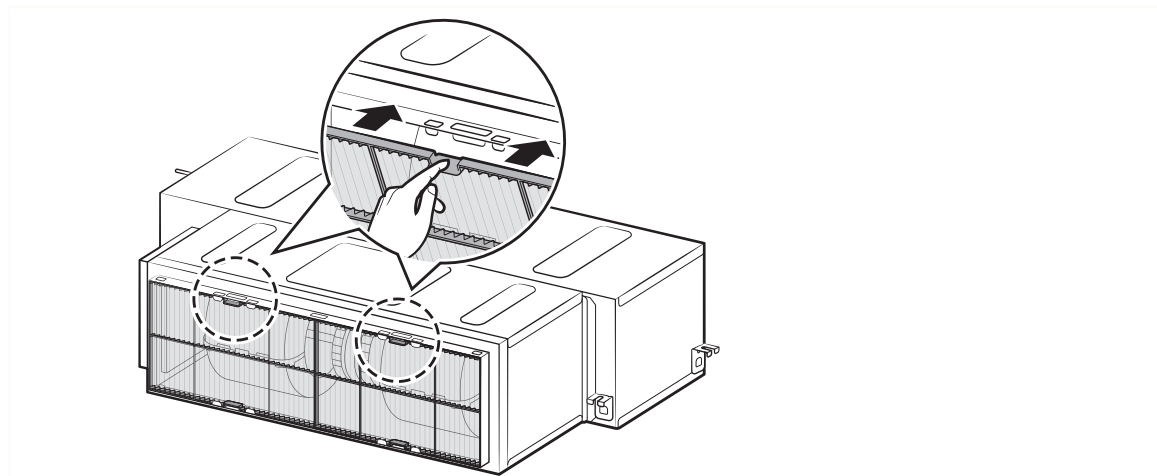

NOTE

- The illustration shown above may differ from yours depending on your model.
- After cleaning the filter, press the **Filter Reset** button on the remote control for 2 seconds to reset the filter schedule. Filter sign indicator will be on for cleaning time.

Maintaining the Air Conditioner

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain in best conditions.

- 1 Dry the air conditioner thoroughly by operating in Fan mode for 3 to 4 hours and then turn off the power. There may be internal damage if moisture is left in components.
- 2 Before using the air conditioner again, dry the inner components of the air conditioner again by running in Fan mode for 3 to 4 hours. This helps remove odours that may have generated from dampness.

Periodical checks

Refer to the following chart to maintain the air conditioner properly.

Type	Description	Monthly	Every 4 months	Once a year
Indoor unit	Clean the air filter (1).	●		
	Clean the condensate drain pan (2).			●
	Thoroughly clean the heat exchanger (2).			●
	Clean the condensate drain pipe (2).		●	
	Replace the remote control batteries (1).			●
Outdoor unit	Clean the heat exchanger on the outside of the unit (2).		●	
	Clean the heat exchanger on the inside of the unit (2).			●
	Clean the electric components with jets of air (2).			●
	Verify that all the electric components are firmly tightened (2).			●
	Clean the fan (2).			●
	Verify that all the fan assembly is firmly tightened (2).			●
	Clean the condensate drain pan (2).			●

NOTE

- The checks and maintenance operations described above are essential to guarantee the efficiency of the air conditioner. The frequency of these operations may vary depending on the characteristics of the area, the amount of dust, etc.
 - a. The above mentioned operations should be performed more frequently if the area of installation is very dusty.
 - b. These operations must always be performed by qualified personnel. For more detailed information, refer to Installation Manual.

Maintaining the Air Conditioner

Internal protections via the unit control system

This internal protection operates if an internal fault occurs in the air conditioner.

Type	Description
Against cold air	The internal fan will be off against cold air when the heat pump is heating.
De-ice cycle	The internal fan will be off against cold air when the heat pump is heating.
Anti-protection of internal battery	The compressor will be off to protect internal battery when the air conditioner operates in Cool mode.
Protect compressor	The air conditioner does not start operating immediately to protect the compressor of the outdoor unit after it has been started.

NOTE

- If the heat pump is operating in Heat mode, the de-ice cycle is actuated to remove frost from an outdoor unit that may have deposited at low temperatures.
- The internal fan is switched off automatically and restarted only after the de-ice cycle is completed.
- When the de-ice cycle is operating, it may generate strange sound. It is normal operation for product safety.

Troubleshooting

Refer to the following chart if the air conditioner operates abnormally. This may save time and unnecessary expense.

Problem	Solution
The air conditioner does not operate at all.	• Check whether the power is turned on, and then operate the air conditioner again. • Check whether the auxiliary power switch (MCCB, ELB) is turned on. • If the auxiliary power switch (MCCB, ELB) is turned off, the air conditioner does not work although you press the  (Power) button. • When you clean the air conditioner or do not use it for an extended period of time, turn off the auxiliary power switch (MCCB, ELB). • After the air conditioner is not used for an extended period of time, be sure to turn on the auxiliary power switch (MCCB, ELB) 6 hours before starting operation.  NOTE • The auxiliary power switch (MCCB, ELB) is sold separately. • Make sure that auxiliary power switch (MCCB, ELB) is installed in the distribution box inside the building. • If the air conditioner is turned off by the Timed off function, turn on the air conditioner again by pressing the  (Power) button.
The temperature does not change.	• Check whether the Fan mode is running. In the Fan mode, the air conditioner controls the set temperature automatically, and you cannot change the set temperature.
Warm air does not come out of the air conditioner.	• Check whether the outdoor unit is designed for cooling only. In this case, warm air does not come out although you select the Heat mode. • Check whether the remote control is designed only for cooling only. Use a remote control that supports both cooling and heating.
The fan speed does not change.	• Check whether the Auto or Dry mode is running. In these modes, the air conditioner controls the fan speed automatically, and you cannot change the fan speed.

Troubleshooting

Problem	Solution
The wireless remote control does not operate.	• Check whether the batteries are discharged. Replace the batteries with new ones. • Make sure that nothing is blocking the remote control sensor. • Check whether any strong lighting sources are near the air conditioner. Strong light which comes from fluorescent bulbs or neon signs may interfere with the remote control.
The wired remote control does not operate.	• Check whether the  indicator is displayed at the bottom right of the remote control display. In this case, turn off both the air conditioner and the auxiliary power switch, and then contact a service centre.
The air conditioner is not turned on or off immediately with the wired remote control.	• Check whether the wired remote control is set for group control. In this case, the air conditioners connected to the wired remote control are turned on or off sequentially. This operation takes up to 32 seconds.
The Timed on/off function does not operate.	• Check whether you pressed the  (SET) button on the remote control after setting the on/off time. Set the on/off time.
The indoor unit display blinks continuously.	• Turn on the air conditioner again by pressing the  (Power) button. • Turn off and then turn on the auxiliary power switch, and then turn on the conditioner. • If the indoor unit display is still blinking, contact a service centre.
I want to get cooler air.	• Operate the air conditioner with a electric fan to save energy and enhance the cooling efficiency.

Problem	Solution
The air is not cool or warm enough.	• In the Cool mode, cool air does not come out if the set temperature is higher than the current temperature. – Press the Temperature button repeatedly until the set temperature (minimum: 18°C) is set to lower than the current temperature. • In the Heat mode, warm air does not come out if the set temperature is lower than the current temperature. – Press the Temperature button repeatedly until the set temperature (maximum: 30°C) is set to higher than the current temperature.
The air is not cool or warm enough.	• Both cooling and heating do not operate in the Fan mode. Select the Cool, Heat, Auto, or Dry mode. • Check whether the air filter is blocked with dirt. A dusty filter may decrease the cooling and heating efficiencies. Clean the air filter frequently. • If a cover is on the outdoor unit or any obstacle is present near the outdoor unit, remove them. • Install the outdoor unit in a well-ventilated place. Avoiding places exposed to direct sunlight or close to a heating appliance. • Place a sunscreen over the outdoor unit to protect it from direct sunlight. • If the indoor unit is installed in a place exposed to direct sunlight, pull the curtains on the windows. • Close the windows and doors to maximize the cooling and heating efficiencies. • If the Cool mode is stopped and then started immediately, cool air comes out after about 3 minutes to protect the compressor of the outdoor unit. • When the Heat mode is started, warm air does not come out immediately to prevent cool air from coming out at the beginning. • If the refrigerant pipe is too long, the cooling and heating efficiencies may be decreased. Avoid exceeding the maximum pipe length.

Troubleshooting

Problem	Solution
The air conditioner makes strange noises.	- In certain conditions (especially, when the outdoor temperature is lower than 20°C), a hissing, rumbling, or splashing sound may be heard while the refrigerant is circulating through the air conditioner. This is a normal operation. - When you press the  (Power) button on the remote control, noise may be heard from the drain pump inside the air conditioner. This noise is a normal sound.
Unpleasant odours permeate the room.	- If the air conditioner is running in a smoky area or if there is a smell entering from outside, ventilate the room properly. - If both indoor temperature and indoor humidity are high, operate the air conditioner in the Clean or Fan mode for 1 to 2 hours. - If the air conditioner has not been operated for an extended period of time, clean the indoor unit and then operate the air conditioner in the Fan mode for 3 to 4 hours to dry the inside of the indoor unit for removal of unpleasant odours. - If the air filter blocked with dirt, clean the air filter.
Steam is produced on the indoor unit.	In winter, if the indoor humidity is high, steam may be produced around the air outlet while the defrost function is running. This is a normal operation.
The outdoor unit fan continues to operate when the air conditioner is turned off.	When the air conditioner is turned off, the outdoor unit fan may continue to operate to reduce noise of the refrigerant gas. This is a normal operation.
Water drops from the piping connections of the outdoor unit.	Condensation may develop due to the difference in temperature. This is a normal condition.
Steam is produced on the outdoor unit.	In winter, when the air conditioner runs in the Heat mode, the frost on the heat exchanger melts and steam may be produced. This is a normal operation, neither product malfunction nor a fire.

Operation Features

Operating temperature and humidity

Mode	Outdoor temperature	Indoor temperature	Indoor humidity
Cool mode	-15°C to 54°C	18°C to 32°C	80% or less
Dry mode	-15°C to 54°C	18°C to 32°C	80% or less

CAUTION

- If you use the air conditioner at a relative humidity above 80 %, it may cause a formation of condensation and a leakage of water on the floor.

Product specification

MODEL	OUTDOOR	AC012TXQLEC		AC018TXQLEC	
	INDOOR	AC012TNMPEC		AC018TNMPEC	
CLIMATE CLASS		T1	T3	T1	T3
RATED VOLTAGE & FREQUENCY		220 - 240V~ 50Hz		220 - 240V~ 50Hz	
RATED CAPACITY	COOLING	12 000 Btu/h	10 200 Btu/h	18 000 Btu/h	15 500 Btu/h
	HEATING(H1)	3.52 kW	2.99 kW	5.28 kW	4.54 kW
RATED CURRENT	COOLING	0.5 A	0.5 A	0.9 A	0.9 A
	HEATING(H1)	-	-	-	-
RATED POWER INPUT	COOLING	45 W	45 W	85 W	85 W
	HEATING(H1)	-	-	-	-
EER / COP	COOLING	12.20 (Btu/hr)/W	9.20 (Btu/hr)/W	12.00 (Btu/hr)/W	9.20 (Btu/hr)/W
	HEATING(H1)	-	-	-	-
POWER FACTOR	COOLING	0.91	0.91	0.96	0.93
	HEATING (H1)	-	-	-	-
ANNUAL ENERGY CONSUMPTION	for 2,000 Hr	-	2220 kWh	-	3380 kWh
	for 2,700 Hr	2646 kWh	2997 kWh	4050 kWh	4563 kWh
NET WEIGHT	INDOOR	26.5 kg		26.5 kg	
	OUTDOOR	30.0 kg		43.5 kg	
NET DIMENSION (W x H x D)	INDOOR	850 x 250 x 700 mm		850 x 250 x 700 mm	
	OUTDOOR	790 x 548 x 285 mm		880 x 638 x 310 mm	
COUNTRY OF ORIGIN (INDOOR UNIT/OUTDOOR UNIT)		CHINA/CHINA		CHINA/KOREA	

MODEL	OUTDOOR	AC024TXQLEC		AC030TXQLEC	
	INDOOR	AC024TNMPEC		AC030TNMPEC	
CLIMATE CLASS		T1	T3	T1	T3
RATED VOLTAGE & FREQUENCY		220 - 240V~ 50Hz		220 - 240V~ 50Hz	
RATED CAPACITY	COOLING	24 000 Btu/h	20 000 Btu/h	28 500 Btu/h	26 000 Btu/h
	HEATING(H1)	7.03 kW	5.85 kW	8.35 kW	7.62 kW
RATED CURRENT	COOLING	1.2 A	1.2 A	1.4 A	1.4 A
	HEATING(H1)	-	-	-	-
RATED POWER INPUT	COOLING	120 W	120 W	145 W	145 W
	HEATING(H1)	-	-	-	-
EER / COP	COOLING	12.20 (Btu/hr)/W	9.20 (Btu/hr)/W	12.00 (Btu/hr)/W	8.80 (Btu/hr)/W
	HEATING(H1)	-	-	-	-
POWER FACTOR	COOLING	0.96	0.95	0.94	0.96
	HEATING (H1)	-	-	-	-
ANNUAL ENERGY CONSUMPTION	for 2,000 Hr	-	4360 kWh	-	5900 kWh
	for 2,700 Hr	5319 kWh	5886 kWh	6399 kWh	7965 kWh
NET WEIGHT	INDOOR	34.0 kg		38.5 kg	
	OUTDOOR	53.0 kg		71.0 kg	
NET DIMENSION (W x H x D)	INDOOR	1200 x 250 x 700 mm		1300 x 300 x 700 mm	
	OUTDOOR	880 x 798 x 310 mm		940 x 998 x 330 mm	
COUNTRY OF ORIGIN (INDOOR UNIT/OUTDOOR UNIT)		CHINA/KOREA		CHINA/KOREA	

MODEL	OUTDOOR	AC036TXQLEC		AC042TXQLEC	
	INDOOR	AC036TNMPEC		AC042TNMPEC	
CLIMATE CLASS		T1	T3	T1	T3
RATED VOLTAGE & FREQUENCY		220 - 240V~ 50Hz		220 - 240V~ 50Hz	
RATED CAPACITY	COOLING	35 000 Btu/h 10.26 kW	32 000 Btu/h 9.38 kW	39 400 Btu/h 11.55 kW	35 000 Btu/h 10.26 kW
	HEATING(H1)	-		-	
RATED CURRENT	COOLING	1.5 A	1.5 A	2.0 A	2.0 A
	HEATING(H1)	-		-	
RATED POWER INPUT	COOLING	190 W	190 W	260 W	260 W
	HEATING(H1)	-		-	
EER / COP	COOLING	12.00 (Btu/hr)/W	9.20 (Btu/hr)/W	12.00 (Btu/hr)/W	8.50 (Btu/hr)/W
	HEATING(H1)	-		-	
POWER FACTOR	COOLING	0.98	0.97	0.97	0.97
	HEATING (H1)	-		-	
ANNUAL ENERGY CONSUMPTION	for 2,000 Hr	-	6940 kWh	-	8240 kWh
	for 2,700 Hr	7830 kWh	9369 kWh	8856 kWh	11 124 kWh
NET WEIGHT	INDOOR	38.5 kg		38.5 kg	
	OUTDOOR	86.0 kg		86.0 kg	
NET DIMENSION (W x H x D)	INDOOR	1300 x 300 x 700 mm		1300 x 300 x 700 mm	
	OUTDOOR	940 x 1210 x 330 mm		940 x 1210 x 330 mm	
COUNTRY OF ORIGIN (INDOOR UNIT/OUTDOOR UNIT)		CHINA/KOREA		CHINA/KOREA	

MODEL	OUTDOOR	AC054TXQLGC		AC060TXQLGC	
	INDOOR	AC054TNMPEC		AC060TNHPEC	
CLIMATE CLASS		T1	T3	T1	T3
RATED VOLTAGE & FREQUENCY		380 - 415 V 3N~ 50 Hz		380 - 415 V 3N~ 50 Hz	
RATED CAPACITY	COOLING	50 000 Btu/h 14.65 kW	48 000 Btu/h 14.07 kW	54 000 Btu/h 15.83 kW	50 000 Btu/h 14.65 kW
	HEATING(H1)	-		-	
RATED CURRENT	COOLING	1.2 A	1.2 A	1.0 A	1.0 A
	HEATING(H1)	-		-	
RATED POWER INPUT	COOLING	550 W	550 W	470 W	470 W
	HEATING(H1)	-		-	
EER / COP	COOLING	12.40 (Btu/hr)/W	8.50 (Btu/hr)/W	12.00 (Btu/hr)/W	8.50 (Btu/hr)/W
	HEATING(H1)	-		-	
POWER FACTOR	COOLING	0.93	0.95	0.93	0.94
	HEATING (H1)	-		-	
ANNUAL ENERGY CONSUMPTION	for 2,000 Hr	-	11 340 kWh	-	11 760 kWh
	for 2,700 Hr	10 908 kWh	15 309 kWh	12 150 kWh	15 876 kWh
NET WEIGHT	INDOOR	68.0 kg		82.5 kg	
	OUTDOOR	96.5 kg		96.5 kg	
NET DIMENSION (W x H x D)	INDOOR	1350 x 360 x 837 mm		1350 x 450 x 850 mm	
	OUTDOOR	940 x 1420 x 330 mm		940 x 1420 x 330 mm	
COUNTRY OF ORIGIN (INDOOR UNIT/OUTDOOR UNIT)		CHINA/KOREA		CHINA/KOREA	

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAM CS (800-72627)	
KUWAIT	183-CALL (183-2255)	
BAHRAIN	8000-GSAM (8000-4726)	
QATAR	800-CALL (800-2255)	

