


Air conditioner

Installation manual

PC4NUDMAN / PC4NUNMAN / PC4NBDMAN / PC4NBNMAN

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this manual carefully and retain it for future reference.

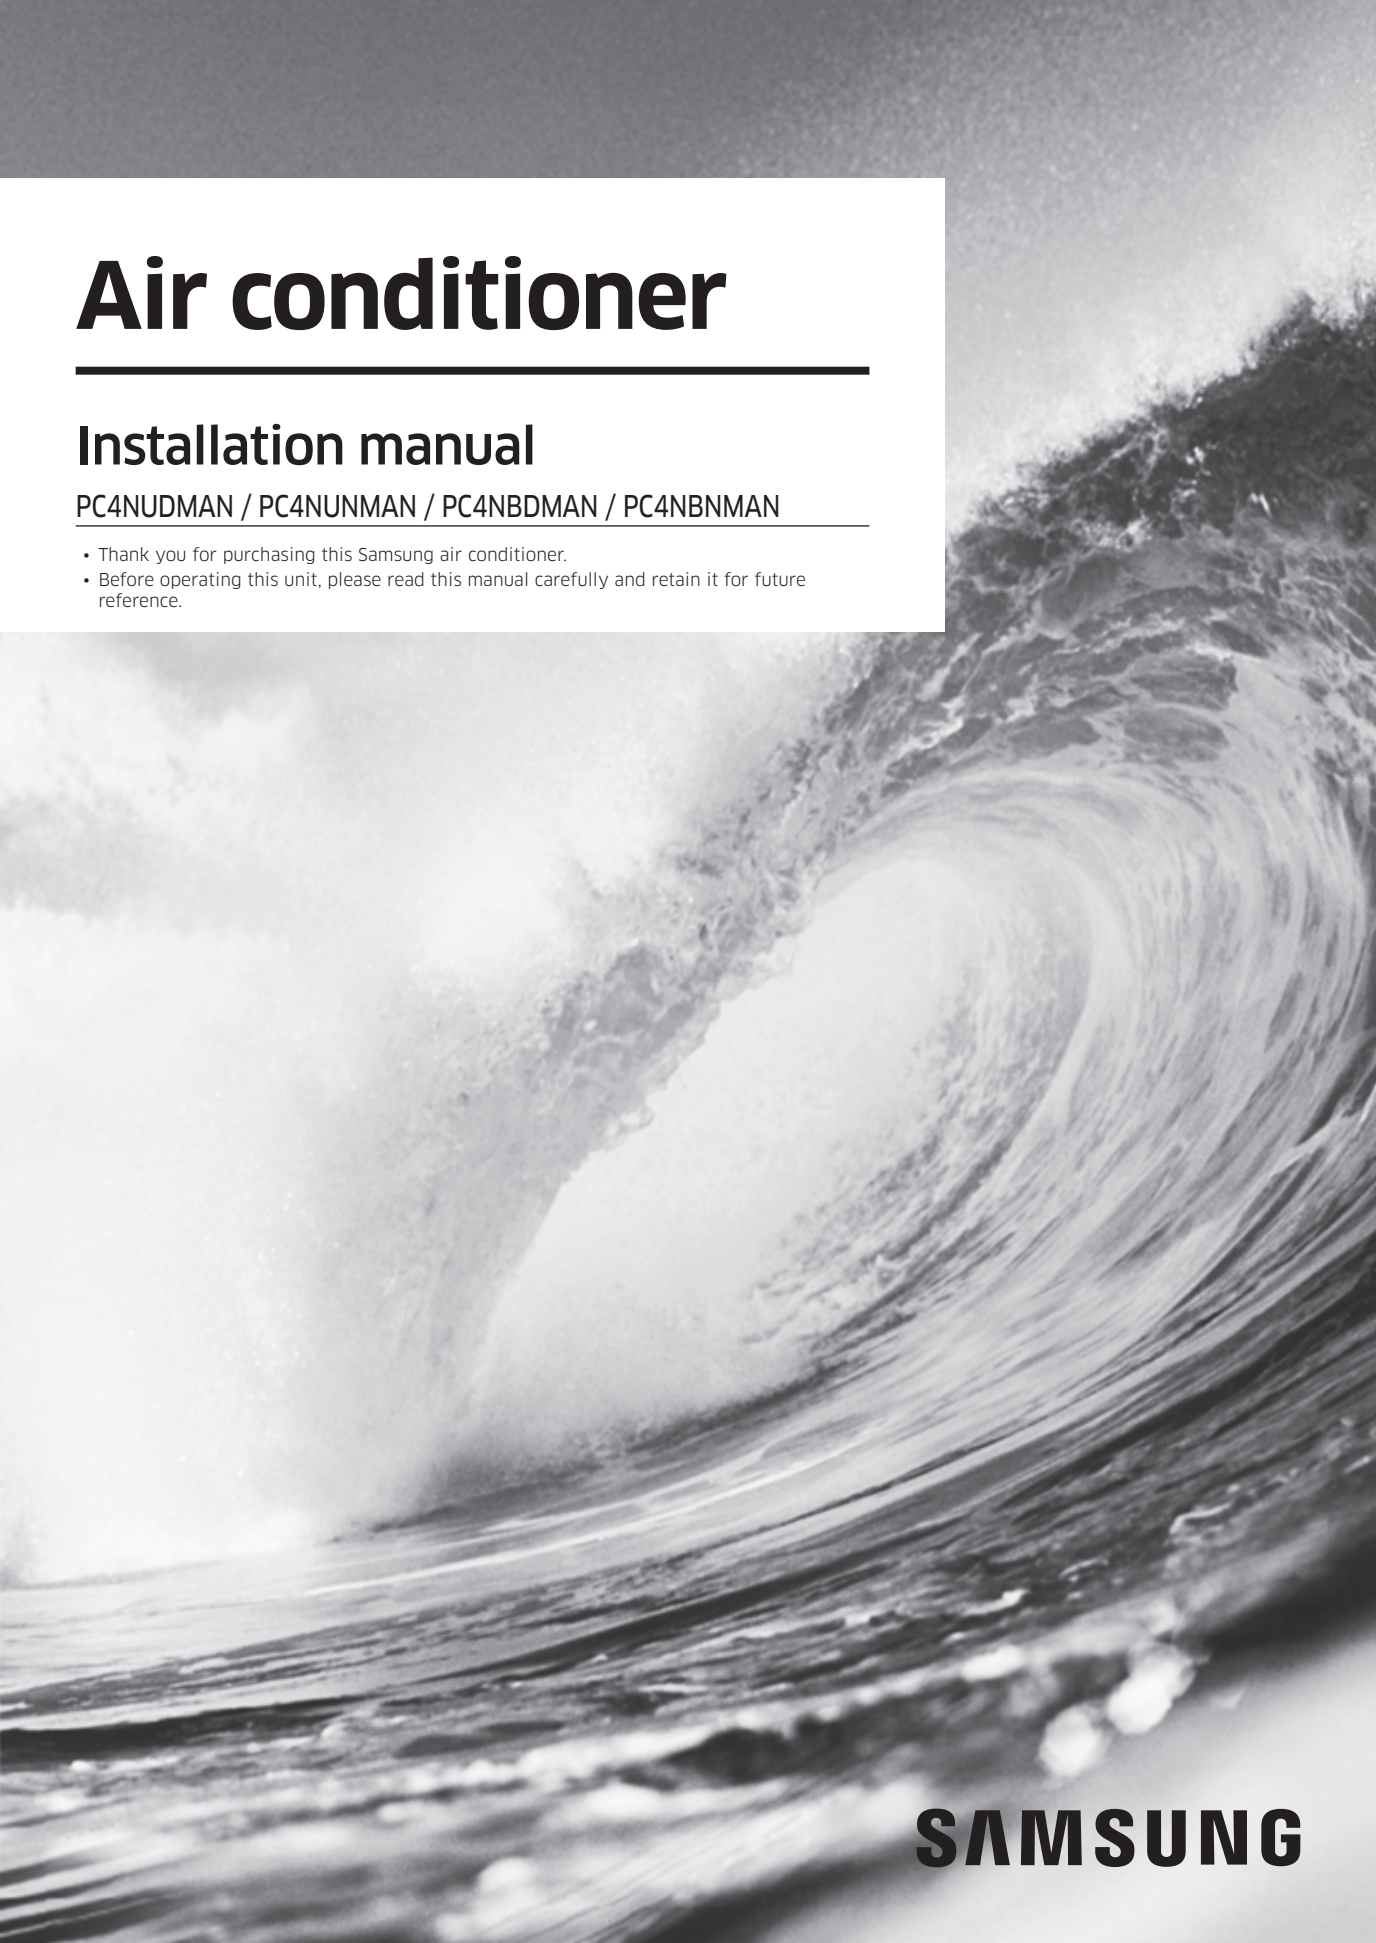

SAMSUNG

Installation

360 cassette panels

Type A: Square panel	Type B: Circular panel
	

Accessories

Item	M4 screw	Installation manual
Quantity	4	1
Shape		

CAUTION


- After installing the product, be sure to explain to the user how to use the air conditioner.

NOTE

- Tightening torque for the M4 screw:
1.2 to 1.8 N·m (* 1N·m = 10 kgf·cm)


Installing the grille inlet for the ceiling type and open type

- Hook the two hook wires of the grille inlet onto the two wire hooks on the indoor unit body.

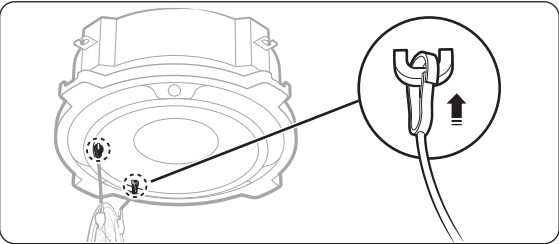


CAUTION

- When servicing the product or replacing parts such as motors and gears, be sure to remove the front grille first. Failing to do so may cause the hook wires to unhook and the front grille to drop on the floor.
 - Be sure to check the letters for the wire hooks printed on the indoor unit body and hook the hook wires onto the specified positions.
- Rotate the grille inlet clockwise until it is assembled firmly in place.

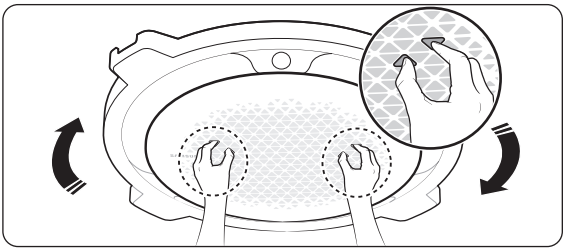


NOTE

- When the grille inlet is installed correctly, the indoor unit display is placed perpendicular to the Samsung logo printed on the grille inlet.

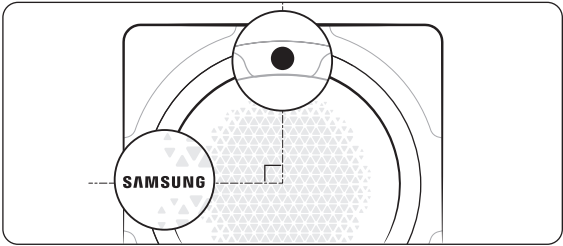


Installing the panel front for the ceiling type

- 1 Remove the four cover panels from the panel front.

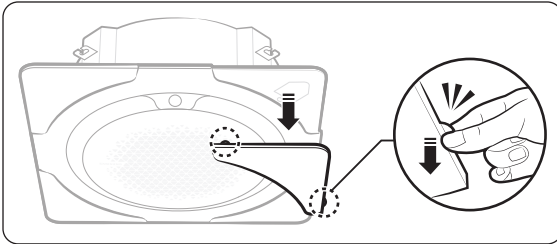


NOTE

- To remove the cover panels, use the two tongues at the ends of each cover panel.
- 2 Push the four corners of the panel front toward the indoor unit body one at a time until you hear "click" so that they are assembled in place.

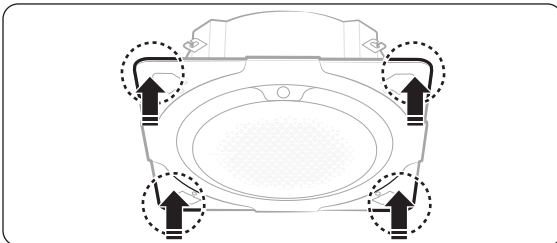


NOTE


- After assembling the panel front in place, you can slightly adjust its position left and right. If required, adjust the position of the panel front so that it aligns with the ceiling opening.
- 3 Push the centres of the four sides of the panel front toward the indoor unit body one at a time until you hear "click" so that they are hooked in place.

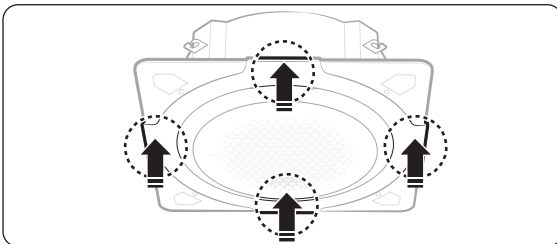


- 4 Insert halfway the four screws into the four holes on the panel front. Then fasten the screws tightly until there is no gap between the ceiling and the panel front.

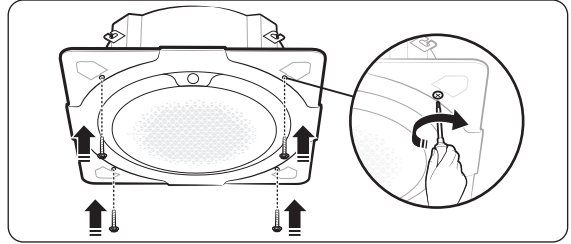

- 5 Place each cover panel on a corner of the panel front. Then push the cover panel upward until it is firmly assembled to the panel front.

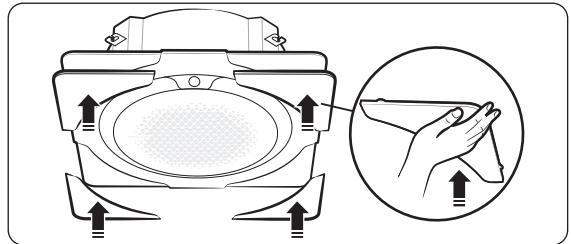

- 6 Check whether the panel front is firmly fixed to the indoor unit body.

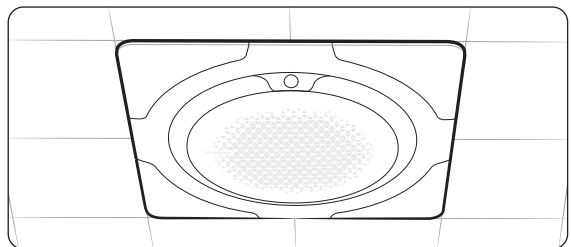


NOTE

- Make sure that the screws are fastened tightly until there is no gap between the ceiling and the panel.
- If the panel is installed incorrectly, air may leak out.


Installation

Installing the circular panel on the indoor unit

- 1 Insert the decoration panel the indoor unit body.
Then rotate the decoration panel clockwise until it is assembled firmly.
- Ceiling type

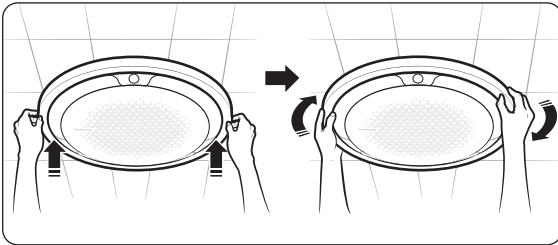


- Open type

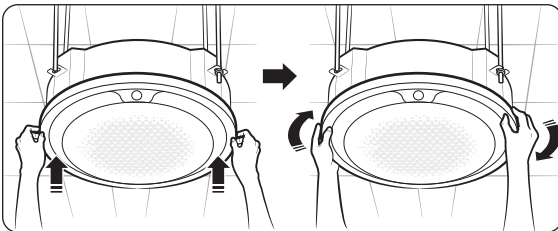

NOTE

- Make sure that the panel is assembled firmly; rotate the decoration panel until you feel that it is clamped by the internal structure.
- 2 Check whether the decoration panel firmly fixed to the indoor unit body.

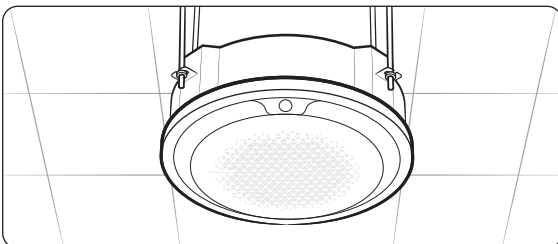

NOTE

- Make sure that the decoration panel is installed correctly so that there is no gap between the ceiling and the panel.
- If the panel is installed incorrectly, air may leak out.

CAUTION

- Make sure to only apply paints and varnishes for resins (ABS, HIPS) or paint thinners.
If you apply lacquers for general use on the panel, it may lead to discoloration or erosion on the surface of the panel.

Memo



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

(For India only)

For more information on safe disposal and recycling, visit our website www.samsung.com/in/support or contact our Helpline numbers - 1800 40 SAMSUNG (1800 40 7267864)

1800 5 SAMSUNG (1800 5 7267864).

This product is India RoHS compliant

